


## A-Pillar Trim Panel

### Removal


**NOTE:** Right hand (RH) shown, left hand (LH) similar.

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the assist handle bolt covers, bolts and the assist handle.  
Torque: 93 lb.in (10.5 Nm)

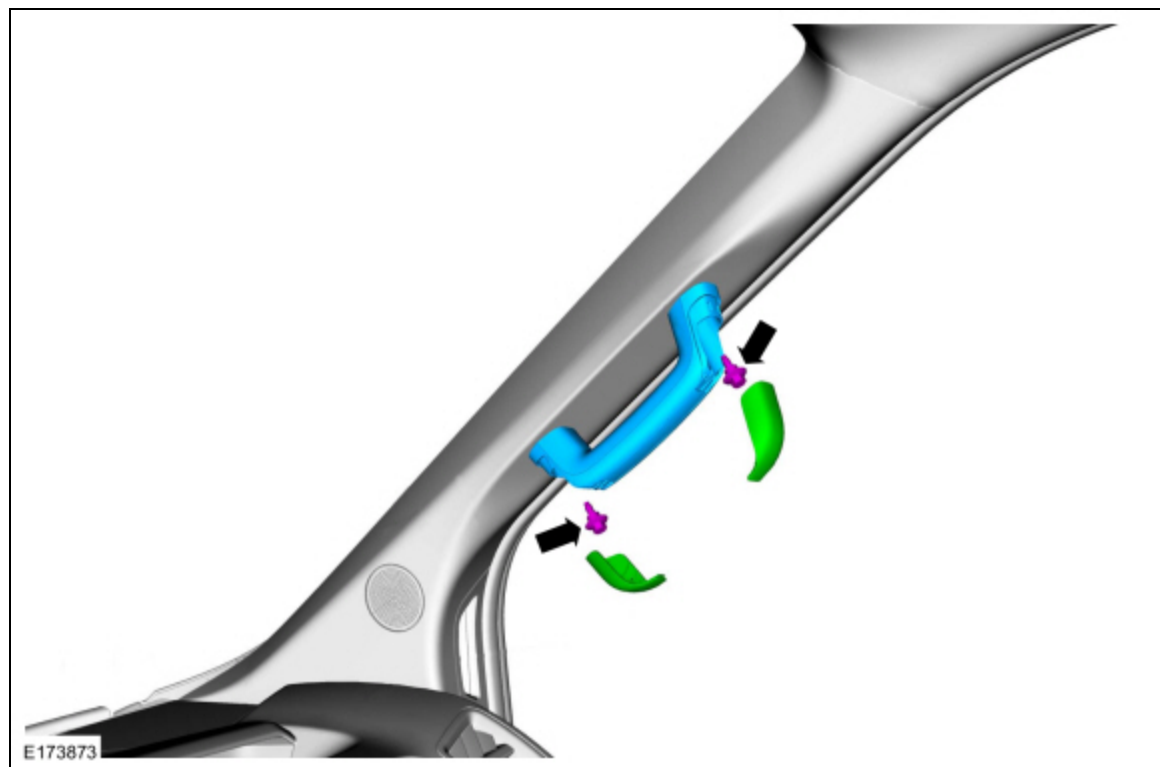

2. Remove the A-pillar trim panel.
  1. Position the front door weather strip aside.
  2. Release the A-pillar trim panel clips.
  3. If equipped.  
Disconnect the A-pillar speaker electrical connector.
  4. If equipped.  
Disconnect the BLIS indicator electrical connector.

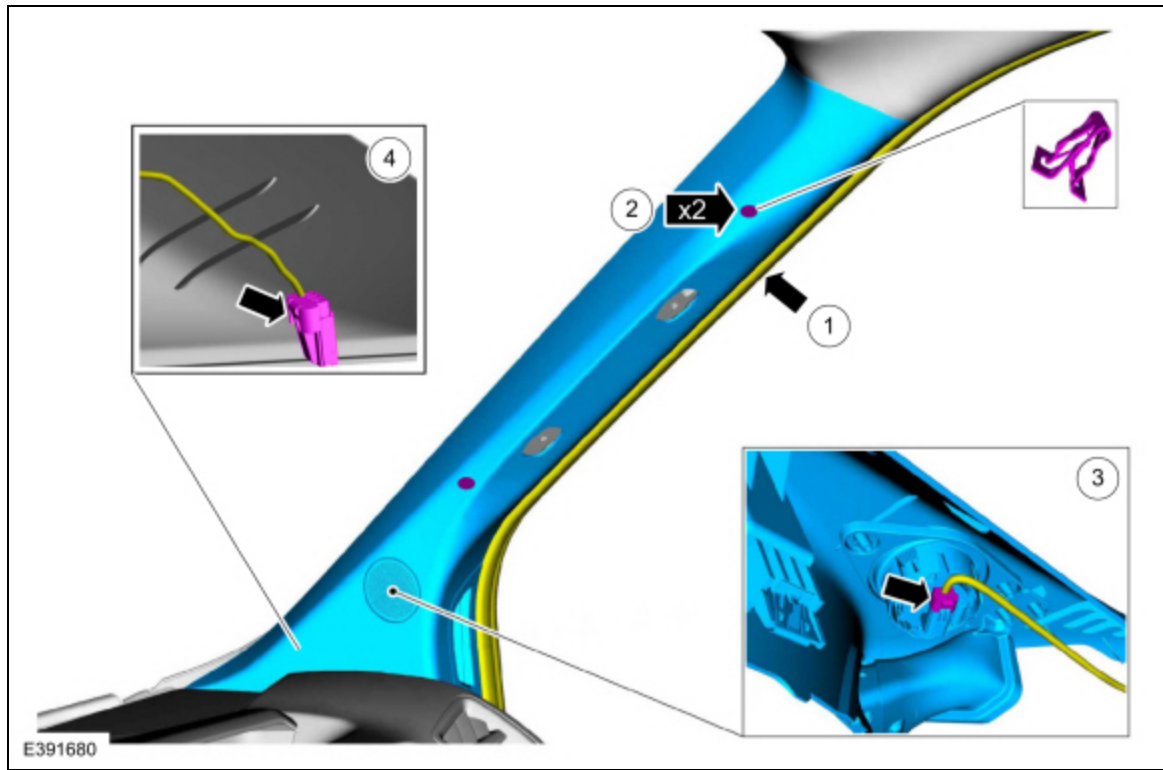

**Installation**

1. **NOTE:** *Transfer parts as necessary.*

To install, reverse the removal procedure.

© Copyright 2024, Ford Motor Company.